


BLACK & DECKER

POWER SCRUBBER

INSTRUCTION MANUAL

Catalog No. PKS160-XE

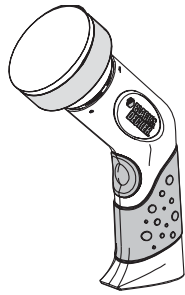

Key Information You Should Know

- When immersing scrubber in water, do not dip the scrubber in to water more than 30cm in deep. Do not leave the scrubber immersed for more than 5 minutes.
- Use only with AA alkaline batteries.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

Catalog Number: PKS160-XE FORM NO. 90596007 PRINTED IN CHINA
Copyright ©2013 Black & Decker

WARNING: Important Safety Warnings and Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS CAREFULLY BEFORE USING THE UNIT.

WARNING: INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

- Close supervision is necessary when any appliance is used by or near children. Do not allow to be used as a toy.
- Do not operate in the presence of explosives and/or flammable fumes or liquids.
- This product is not a beauty aid. Do not use on any part of the body.
- Always wear eye protection when using the scrubber with irritating substances. You may also want to use rubber gloves. Read and follow manufacturer's instructions on the cleaning agent you use.
- Always store unit indoors.
- Keep hair, loose clothing, and all parts of body away from moving parts.
- Do not insert attachments/accessories when unit is running.
- The power scrubber is only to be immersed in water and only with the battery holder fully inserted.
- Store out of reach of children.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use only as described in this manual. Use only Black & Decker recommended attachments.
- Do not contact moving parts.



SAVE THESE INSTRUCTIONS

BATTERY INSTALLATION

Remove the battery holder by pulling the ring as shown in **Figure 1**. Insert four fresh alkaline AA batteries making sure to match (+) and (-) terminals correctly and reinstall the battery holder. The battery holder assembly will only fit back into the tool one way. If it does not seem to fit properly, don't force it. Rotate it one half way around and try it again. Ensure that the battery holder is inserted all the way.

WARNING: Batteries can explode, or leak, and can cause injury or fire. To reduce this risk:

- Carefully follow all instructions and warnings on the battery label and package.
- Always insert batteries correctly with regard to polarity (+ and -), marked on the battery and the equipment.
- Do not short battery terminals.
- Do not charge batteries.
- Do not mix old and new batteries. Replace all of them at the same time with new batteries of the same brand and type.
- Remove dead batteries immediately and dispose of per local codes.
- Do not dispose of batteries in fire.
- Keep batteries out of reach of children.
- Remove batteries if the device will not be used for several months.
- Transporting batteries can possibly cause fires if the battery terminals inadvertently come in contact with conductive materials such as keys, coins, hand tools and the like. When transporting individual batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit.

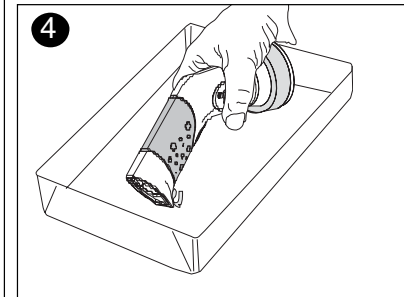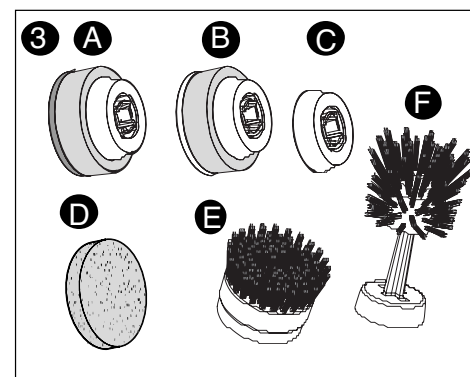

OPERATING INSTRUCTIONS

How to Operate Switch

1. To operate, push the Switch in to turn on. Press the Switch in again to turn off. To avoid splatter from a Brush or Pad, turn the scrubber off while the attachment is still in contact with the surface.
2. Because this scrubber is powerful, you don't have to apply excessive pressure while operating. Use a circular motion on large areas.

Important: If some water leaks into the unit, it will not affect performance. However, should the unit accidentally fall into water without the battery cap in place, shake out loose liquid and allow to air dry overnight.

Attaching Accessories

Do not attach/remove accessory when unit is running.

1. To connect an attachment, line up the shape of the end of the accessory with the shaft and push it on, (**Fig. 2**) until it snaps in place.
2. To remove an attachment, simply pull it off.

Accessories (Fig. 3)

Note: Refer to product packaging for a complete list of the accessories that are included with the specific Power Scrubber model you purchased.

- A. Tough scour pad (**green**) with foam backing for aggressive scrubbing on pots, pans, sinks and other kitchen surfaces.
- B. Scratch free scour pad (**white**) with foam backing for non-stick surfaces.
- C. Hook and loop pad carrier for use with scour pads without foam backing.
- D. Heavy duty scour pad (**blue**) for aggressive scrubbing on pots, pans, sinks and other kitchen surfaces.
- E. Bristle brush (**blue**) for aggressive scrubbing on pots, pans, sinks and other kitchen surfaces.
- F. Glass brush for cleaning tall narrow glasses, coffee carafes without vacuum insulated glass liners, blender jars, etc.

Note: These are the available accessories for the power scrubber. Depending on the kit you purchased, all or some will be included. Additional accessories are available for purchase
Australia: 1 800 338 002 or New Zealand: 0800 339 258

How to Use the Scraper Feature

- The scraper feature is located on the base of the unit.
- Turn the unit around (**shown in Fig. 4**) and scrape back and forth.

Note: Apply the amount of pressure that is appropriate to the surface being cleaned.

CLEANING AND STORAGE

1. Clean the Brushes and Scrub Pads in a mild detergent, rinse with water and air dry. You may rinse any attachments/accessories by dipping the scrubber into a bucket of water no more than 12 inches (30 cm) deep or running under a faucet. Do not leave immersed for more than 5 minutes.
2. To clean the scrubber unit, wipe with a damp sponge and a mild soap.
3. Keep the battery holder and unit clean to assure a good seal.
4. Store the scrubber and attachments/accessories indoors.

Tips on Cleaning Agents

IMPORTANT: The power scrubber has been designed for easy, powerful cleaning. If you are uncertain about its use on a surface, test an attachment on a small inconspicuous area before cleaning larger areas.

- Always follow manufacturer's recommendations when using a chemical cleaner such as sprays, foams, rub-on gels, liquid detergents, or bleach solutions.
- Do not use with abrasive cleaners on any surface or in the unit.
- Always wear rubber gloves and protective eye wear (to avoid splatter) when using irritating cleaners.

TROUBLESHOOTING

Problem	Possible Cause	Possible Solution
• Unit does not run	• Batteries dead	• Replace all four batteries with fresh alkaline AA batteries
	• Batteries installed incorrectly	• Make sure to match (+) and (-) terminals on batteries with markings on battery holder
	• Battery carrier not fully inserted	• Ensure battery carrier is properly aligned with tool and push in until flush with bottom
	• Poor quality batteries or incorrect battery type	• Use only new premium grade AA alkaline batteries
• Short run time	• Battery carrier o-ring dry	• Lubricate o-ring with light oil or grease (Vaseline, etc.)
• Battery carrier hard to insert or remove	• Battery carrier not fully inserted	• Ensure battery carrier is properly aligned with tool and push in until flush with bottom
• Water leaks into unit	• Battery carrier o-ring damaged	• Inspect o-ring for damage, contact a Black & Decker service center or authorized servicer for replacement parts
	• Depth of water too great	• Do not submerge scrubber in more than 12 inches (30 cm) of water

Australia & New Zealand

Stanley Black & Decker

82 Taryn Drive, Epping, VIC 3076 Australia

Tel. 1800 444 224 (Aust) or Tel. 0800 339 258 (NZ)

